

LOAD CARRYING

⚠ WARNING


Never allow passengers to travel in the luggage compartment under any circumstances. All vehicle occupants should be seated correctly and wear a seat belt at all times when the vehicle is in motion. Failure to do so could result in serious injury or death in the event of a collision.

⚠ WARNING

All items carried in the loadspace area should be properly secured. If the vehicle is involved in an accident, subject to sudden braking or change of direction, loose items can cause serious injury.

⚠ WARNING

Never place objects on top of the loadspace cover. During an accident or sudden maneuver, loose objects can cause serious injury or death.

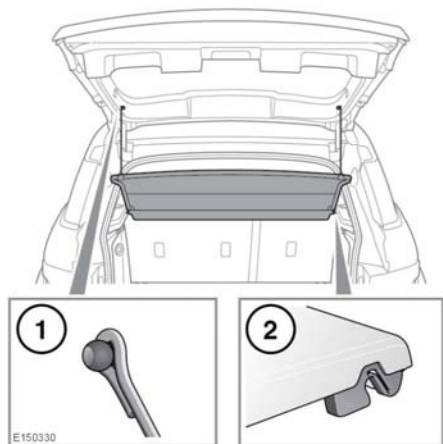

To remove the loadspace cover:

1. Release the 2 straps from the pins on the tailgate.
2. Pull the cover rearwards to release the retaining brackets on the edges of the cover from the pins on the loadspace side trim.

Installation of the cover is the reverse of removal.

Storing the cover:

⚠ WARNING

Do not store the loadspace cover loose in the vehicle. During an accident or sudden maneuver, the loadspace cover could cause serious injury or death.

1. Remove the loadspace cover.
2. Fold the rear seats forward.
3. Position the cover vertically in the vehicle approximately where the upright rear seatbacks are normally. The top surface of the cover must be facing forwards with the retaining brackets at the top.
4. Locate the retaining brackets onto the side trim pins.
5. Return the rear seats to the upright locked position.

ROOF RACKS AND LOAD CARRIERS

⚠ WARNING

A loaded roof rack can reduce the stability of the vehicle, particularly when cornering and during cross winds.

⚠ WARNING

Driving off road with a loaded roof rack is not recommended.

Fit only a roof rack system that is designed for use with your vehicle. For further information, consult your Retailer/Authorized Repairer.