


## LUGGAGE COMPARTMENT FUSE BOX

### Upper

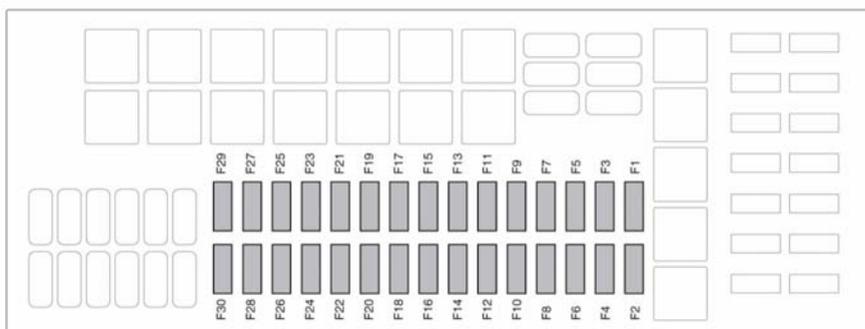


E162827

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F1	20	Yellow	Rear centre console.
F2	25	White	Front heated seat.
F3	25	White	Rear heated seat.
F4	15	Blue	Rear seat. Torch socket.
F5	15	Blue	Trailer socket.
F6	15	Blue	Fuel pump (V8 diesel only).
F7	5	Tan	Chassis control module.
F8	15	Blue	Front seat.
F9	20	Yellow	Loadspace auxiliary power socket.
F10	-	-	-
F11	-	-	-
F12	20	Yellow	Rear seat auxiliary power socket.
F13	20	Yellow	Rear centre console.
F14	10	Red	Headlamp control module. Parking aid. Blind Spot Monitoring (BSM). Rear-view mirror. Proximity camera.

# Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F15	15	Blue	Fuel pump (diesel only).
F15	30	Green	Fuel pump (petrol only).
F16	5	Tan	Adaptive Cruise Control (ACC).
F17	30	Green	Passenger front seat.
F18	30	Green	Rear blower motor.
F19	30	Green	Electric Parking Brake (EPB).
F20	10	Red	Chassis control module.
F21	30	Green	EPB.
F22	15	Blue	Trailer socket.
F23	15	Blue	Chassis control module.
F24	15	Blue	Telematics control unit.
F25	30	Green	Deployable sidesteps.
F26	20	Yellow	Rear wiper.
F27	30	Green	Rear seat (left side).
F28	30	Green	Rear seat (left side).
F29	30	Green	Rear seat (right side).
F30	30	Green	Rear seat (right side).

## Lower

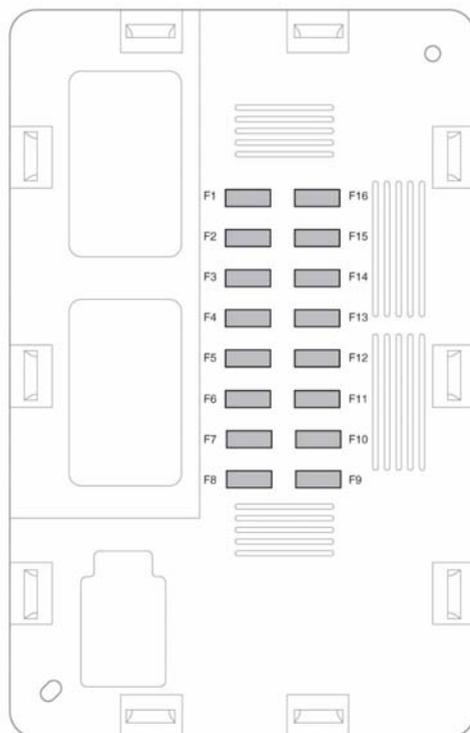

E162828

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F1A	15	Blue	Touch screen. Front integrated control panel.
F2A	10	Red	Audio amplifier.
F3A	-	-	-
F4A	10	Red	Navigation system. Digital radio. TV tuner.
F5A	15	Blue	Audio head unit.
F6A	15	Blue	Audio video input/output panel.
F7A	-	-	-
F8A	-	-	-
F9A	-	-	-

## Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F10A	-	-	-
F11A	-	-	-
F12A	-	-	-
F13A	-	-	-
F14A	-	-	-
F15A	15	Blue	Front integrated control panel. Rear integrated control panel.
F16A	20	Yellow	Fuel burning heater.