

## Parking aids

When Reverse (**R**) gear is selected, the front, rear, and side sensors become active. The sensors remain active until the vehicle's speed reaches 16 km/h (10 mph).

If Drive (**D**) is subsequently selected, the front, rear, and side sensors will remain active until the vehicle's speed reaches 16 km/h (10 mph).

If (**D**) is selected directly from Park (**P**), the Parking aid and 360° Park Distance Control systems only become active if the Parking aid button is pressed and the vehicle's speed is less than 10 km/h (6 mph). If these conditions are met, the front and side sensors become active. The sensors remain active until the vehicle's speed reaches 16 km/h (10 mph).

By pressing the Parking aid button (1) for 3 seconds, the Parking aid system can be automatically activated when the vehicle's speed decreases to less than 10 km/h (6 mph) or when Reverse (**R**) gear is selected. The Parking aid button LED illuminates to inform the driver that the system is active. To switch the Parking aid off, press the button.

When objects are detected, the system emits a warning tone, which increases in frequency as the vehicle gets closer to an object. The tone becomes constant when the object is within 300 mm (12 in) of the vehicle.

**Note:** If the Parking aid system does not detect an object likely to come into contact with the vehicle, it does not display any tracking information on the Touch screen.

**Note:** The sensors should be kept clean to maintain accuracy and performance. See 237, **SENSORS AND CAMERAS**.

### PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, the switch indicator will flash and the message **Parking Aid is not available. Please consult your dealer** will be displayed on the Touch screen. Contact your Dealer/Authorised Repairer as soon as possible.

### REAR CAMERA




**It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.**



Some overhanging objects or barriers, which could cause damage to the vehicle, may not be detected by the camera.


If the vehicle is fitted with a Rear camera, this has priority over the Parking aids display.

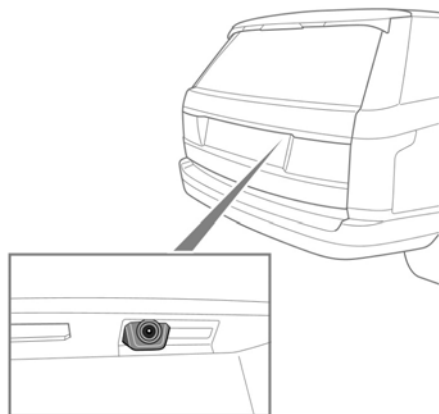

E138926

The Rear camera is located on the tailgate.

When Reverse (**R**) gear is selected, the screen automatically displays a wide-angle, colour image from the rear of your vehicle. Overlaid on the image are reversing guide lines and an indication of which sensors are active.

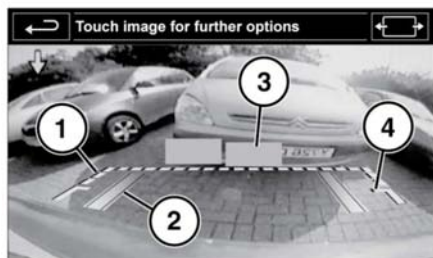

E161393


1. Dotted guidance line: The safe working width of the vehicle (including the exterior mirrors).
2. Solid guidance line: The projected path based on the current steering wheel position.
3. Park Distance Control (PDC) graphics: A coloured area appears, to indicate which rear sensor(s) has been activated.
4. Tailgate access guidance line: Do not reverse beyond this point, if tailgate access is required.

To cancel the Rear camera display at any time, push the **Home menu** button or touch the back soft key.

**Note:** A camera icon will be displayed on the user options screen, when selected from **Extra features**. Touch the camera icon, to return to the Rear camera screen.

For vehicles fitted with a Rear camera only:

To adjust the camera settings while in Reverse (R), touch anywhere on the Touch screen to display the settings.

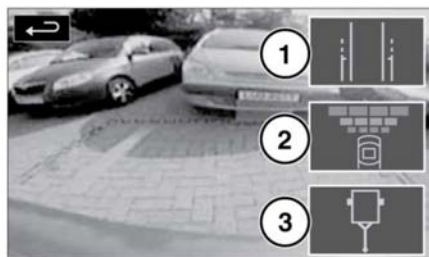


E161395

1. Touch to enable/disable the Park assist guidance lines.
2. Touch to enable/disable the Park Distance Control (PDC) graphics.
3. Touch to enable/disable the Hitch guidance line. Use this feature to aid the process of guiding the vehicle to a towing hitch. A single line is displayed as the reversing guideline. See **107, HITCH GUIDANCE**.

For vehicles fitted with a Surround camera system:

To adjust the camera settings while in Reverse (R), touch anywhere on the Touch screen to display the settings, or select **Extra features** from the Home menu, touch **Cameras** and select **Settings**.

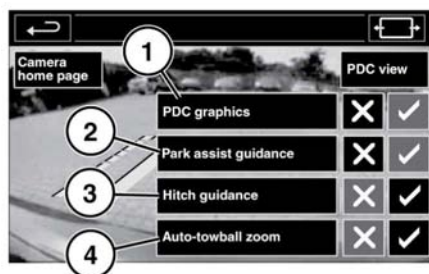

E161394

1. Touch to enable/disable the Park Distance Control (PDC) graphics.

2. Touch to enable/disable the **Park assist guidance** lines.
3. Touch to enable/disable the **Hitch guidance** line. Use this feature to aid the process of guiding the vehicle to a towing hitch. A single line is displayed as the reversing guideline. See **107, HITCH GUIDANCE**.
4. Touch to enable/disable the **Auto-towball zoom**. As the vehicle closes to within 600 mm (24 ins) of a towing hitch, an automated zoom is operated.

The Rear camera display on the Touch screen will discontinue when either of the following apply:

- A forward gear is selected for longer than 5 seconds.
- A forward gear is selected and/or the vehicle's speed is greater than 18 km/h (11 mph).