

## SINGLE LOCKING

Press the lock button on the Smart key briefly to Single lock the vehicle and activate the Perimeter alarm. The hazard warning lamps will flash to confirm.

Single locking secures the vehicle and prevents the doors from being opened from outside. The doors may still be unlocked and opened from inside the vehicle. In this state, only the Perimeter alarm is activated. See **12, PERIMETER ALARM**.

**Note:** This setting should be used in circumstances, such as travelling on a ferry, when pets are to be left in the vehicle, or if a window must be left open, etc.

**Note:** Always secure your vehicle when left unattended. Where possible, always secure your vehicle to the maximum available level of security.

## DOUBLE LOCKING



**Never Double lock the vehicle with people, children, or pets inside. In the event of an emergency they would be unable to escape and the emergency services would be unable to release them quickly.**

Press the lock button on the Smart key twice within 3 seconds to Double lock the vehicle and activate the Full alarm system. The hazard warning lamps will flash twice to confirm and a Double lock tone will sound.

Double locking secures the vehicle and prevents the doors from being opened from inside or outside of the vehicle. The doors cannot be unlocked or opened from inside the vehicle when Double locked.

This provides extra security if the vehicle is left unattended. The vehicle cannot be opened by breaking a window and operating the door locks from inside. Additionally, Double locking also activates the Full alarm system. See **12, FULL ALARM**.

**Note:** In this state, an open window or sunroof will cause the alarm to sound due to the movement of air currents. For this reason, make sure that all of the windows and the sunroof are fully closed before Double locking the vehicle.

## PERIMETER ALARM

The Perimeter alarm system is activated when the vehicle is Single locked. See **12, SINGLE LOCKING**. Once activated, the alarm system will sound if:

- the bonnet, tailgate or a door is opened.
- the engine **START/STOP** button is pressed without a valid Smart key present.

If the vehicle is fitted with a battery backed-up sounder, the sounder will sound if the battery is disconnected, or an attempt is made to disconnect the sounder.

## FULL ALARM

The Full alarm system is activated when the vehicle is Double locked. See **12, DOUBLE LOCKING**. Once activated, the alarm system will sound if:

- The bonnet, tailgate or a door is opened.
- Movement is detected within the vehicle's interior.
- The vehicle is raised or tilted.

If the vehicle is fitted with a battery backed-up sounder, the sounder will sound if:

- The vehicle's battery is disconnected.
- An attempt is made to disconnect the sounder.