

THE NAVIGATION SYSTEM

Navigation instruction is by map and turn information displayed on the Touch screen and can be complemented by Voice guidance, if required. The system uses signals from Global Positioning System (GPS) satellites, combined with information from vehicle sensors and from data stored on the hard drive, to establish the true position of the vehicle.

Note: Mapping data loaded on the hard drive is relevant to the market in which the vehicle is first sold and will provide guidance and information only for that area. Your Land Rover Dealer/Authorised Repairer will have details of software updates.

Using this combination of data sources, the vehicle's navigation computer enables you to plan and follow a route map to your desired destination.

The Touch screen is used to control navigation via menus, text screens, and map displays.

 **Operate the system only when it is safe to do so.**

Note: The Navigation system fitted to your vehicle does not support speed camera alerts.

The requirements of national Road Traffic Regulations always apply.

Observation of traffic signs and local traffic regulations always take priority.

The Navigation system serves solely as an aid to navigation. In particular, the Navigation system cannot be used as an aid to orientation when visibility is poor.


GPS signals may occasionally be interrupted due to physical barriers, such as tunnels and roads, under raised highways.

However, direction and speed sensors on the vehicle will minimise any adverse effect on the Navigation system. Normal operation will resume once the obstruction has been passed.

Under certain conditions, it is possible for the vehicle's position shown on screen to be incorrect. This may happen:

- When driving on a spiral ramp in a building.
- When driving on or beneath elevated roads.
- When two roads are close and parallel.
- When the vehicle is transported to another destination.
- After the vehicle has been rotated on a turntable.
- After the vehicle's battery has been disconnected.

USING THE NAVIGATION SYSTEM

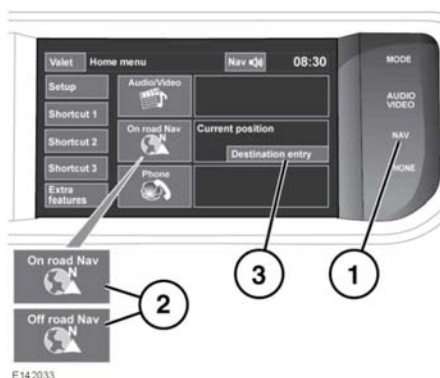

1. **NAV** shortcut button: Press for navigation.
2. **Navigation** soft key: Touch for navigation.
3. **Destination entry**: Touch to display the Destination entry menu.

Note: On vehicles with off-road navigation, the soft key includes **On road NAV** or **Off road NAV**, to show the current Navigation mode.

After touching **Continue**, the Touch screen will display the previously displayed map view. This will show the current vehicle position. Touch the **Nav menu** soft key to display the Main menu screen.

At this point, the first time user should set up personal preferences in the **Nav set-up** area. These settings are applied whenever navigation is used.

Note: *The Navigation distance units can be changed between metric, imperial or mixed units in the **Trip Computer** menu in the Message centre, see 48, **METRIC/IMPERIAL/MIXED DISPLAY**.*