

TOUCH SCREEN USE

- ⓘ Always run the engine during prolonged use of the Touch screen. Failure to do so, may discharge the vehicle's battery, preventing the engine from starting.
- ⓘ Avoid spilling or splashing liquids onto the Touch screen.

Note: Do not wear gloves when operating the Touch screen.

TOUCH SCREEN CARE

- ⓘ Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

TOUCH SCREEN SETUP

Select **Set-up** from the Touch screen **Home menu**. The **Set-up** screen is divided into the following categories:

- Screen.
- System.
- Voice.
- Audio.
- Conversation assist.

SCREEN SETTINGS

Volume pop-up: Displays a Volume pop-up On/Off icon.

Screensaver: Changes the screensaver.

Time out home: Sub-menu selection screens can be set to revert to the **Home menu** after a predetermined length of time.

Theme: Changes appearance of the Touch screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to turn the soft key confirmation tone On/Off.

Clock adjust: Select **12** or **24** hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

Note: The clock can also be adjusted from the Touch screen time display.

Home menu shortcuts: Select up to 2 items from the displayed list, to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.

Language: Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

Note: Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.

Volume presets: Adjust the volume for the available systems (announcements, parking aid, phone, voice, etc.).