

Starting the engine

Note: The steering column has markings on the side, to aid placement of the Smart key.

2. Press the brake pedal firmly.
3. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released, if it is safe to do so.

If the Smart key is not recognised, or the engine still fails to start, consult a Dealer/Authorised Repairer.

IF THE ENGINE FAILS TO START

Note: If the engine fails to crank when the engine **START/STOP** button is pressed, and there has been a recent collision, seek qualified assistance.

Make sure that the brake pedal is not pressed. Switch on the ignition (see **118, STARTING THE ENGINE**) and check the Instrument panel for warning lamps and the Message centre for warning messages. See **46, INSTRUMENT PANEL MENU**. Seek qualified assistance, if necessary.

Switch off the ignition.

To reset the alarm system use a valid Smart key to lock and unlock the vehicle. See **4, UNLOCKING THE VEHICLE**.

Note: The following information applies to petrol vehicles only.

If the engine persistently fails to start:

1. Make sure that a valid Smart key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Press the brake pedal firmly.
4. Make sure Park (**P**) or Neutral (**N**) is selected.
5. Slowly press the accelerator pedal fully and hold it in the fully pressed position.
6. Press and release the engine **START/STOP** button. The engine will begin to crank.
7. Release the accelerator pedal when the engine starts.

Once the engine has started, the brake pedal can be released, if it safe to do so.

If the engine still fails to crank or start, consult a Dealer/Authorised Repairer.