Audio/video overview

Short press:

- To select the next radio preset.
- To select the next track on the chosen audio source - CD. MP3. etc.
- When the telephone is in use, press to scroll up lists of calls or phonebook entries.
- To select the next TV channel on the Channel list, or the next DVD chapter.

Long press:

- To auto-seek up the frequency to the next radio station.
- **9.** Press to decrease the volume for any source.
- **10. MODE**: Press repeatedly to scroll through all of the audio/video sources.

11. Seek down:

Short press:

- To select the previous radio preset.
- To select the previous track, or the start of the current track on chosen audio source - CD. MP3, etc.
- When the telephone is in use, press to scroll down lists of calls or phonebook entries
- To select the previous TV channel on the Channel list, or the previous DVD chapter.

Long press:

 To auto-seek down the frequency to the next radio station.

AUDIO SETTINGS


To view the **Audio/Video** menu, press the **AUDIO VIDEO** hard key. Touch the **Settings** soft key, and then select **Audio settings** to access the **Audio settings** menu.

To adjust the sound settings:

 Touch the Tone soft key. Touch the + or soft keys to adjust the Bass, Treble or Subwoofer levels.

To adjust balance and fade:

Touch the Balance/Fade soft key.

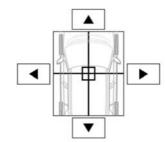

E151012

Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

To adjust the surround sound settings:

- If Meridian Surround is available, touch the Meridian, DPLIIx, or DTS Neo:6 soft keys to select 2D surround. Select Stereo to switch 2D surround off
- If Meridian Signature Reference is fitted, 3D surround is also available. Select the 3D surround On soft key. Touch Meridian, DPLIIz, or DTS Neo:X to activate 3D surround mode.

Note: Surround sound options are not available for certain sources where the surround sound mode is set automatically.

LOADING DISCS



Do not force the disc into the slot.