

- selecting park assist.....146
  - sitting correctly.....17
  - steep slope control with ABS.....134
  - using ACC.....154
  - using cruise control.....153
  - weekly checks.....231
  - Driving abroad
    - beam pattern.....57
    - headlamps.....57
  - Driving aids
    - lane departure warning.....137
    - traffic sign recognition.....138
  - Driving short distances
    - diesel particulate filter (DPF).....233
  - Dual view.....188
    - controls.....188
  - Dynamic response
    - fluid level.....245
    - fluid specification.....246
    - fluid top up.....246
  - Dynamic stability control (DSC).....129
    - DSC active warning lamp.....52
    - DSC off warning lamp.....52
    - switching off.....129
    - switching on.....129
- E**
- Easy route.....213
  - Eco-data controls.....124
  - Electric mode.....115
  - Electric parking brake.....135
  - Electric rear seats
    - reclining.....21
  - Electric seats.....16
    - head restraint removal.....26
    - head restraints.....25
    - passenger seat away.....22
    - position memory.....18
    - restricted front seat travel.....17
  - Electric windows
    - operation.....72
  - Electronic brake force distribution.....134
  - Electronic data.....287
  - Email
    - inControl connection.....203
  - Emergency (navigation).....214
  - Emergency brake assist.....134, 159
  - Emergency call
    - inControl link.....202
  - Emergency key locking.....15
  - Engine
    - antifreeze level.....243
    - compartment opening.....234
    - coolant level.....243
    - diesel fuel.....224
    - diesel particulate filter (DPF).....232
    - engine compartment
      - poisonous fluids.....234
    - oil level.....241
    - petrol fuels.....223
    - running-in.....230
    - specifications.....289
    - starting
      - keyless start backup.....119
      - switching off.....118
  - Engine/transmission warning lamp.....51
  - Engine compartment
    - fluid filler locations.....241
  - Engine covers
    - refitting.....235
    - removal.....235
  - Engine oil
    - capacity.....292
  - Engine starting.....118
    - failure to start.....120
  - Engine temperature warning lamp.....50
  - Ensembles for DAB radio stations.....177
  - Entering a destination.....212
  - Entering the vehicle
    - entry and exit mode.....27
    - global opening.....6
    - keyless entry.....6
    - passive entry.....6
    - unlocking mode.....6
    - unlocking the steering column.....27
  - Ethanol.....223
  - EU conformity (navigation system).....222