

## CHANGING THE CONNECTED PHONE

Up to 10 mobile phones can be paired with the vehicle in the same way. However, only 1 can be connected and ready for use as a phone at any one time.

To connect a different paired phone to the vehicle, follow the steps below:

1. From the **Home menu**, select **Phone**.
2. A menu will appear. Select **Change phone**.
3. Identify and select your phone from the displayed list.
4. Once your phone is connected to the system, a confirmation message will be displayed before switching to the Digit dial screen.

## TELEPHONE SYSTEM ICONS

 Connect: Use to send or accept a call and access the Last 10 calls list.

 Disconnect: Use to end or reject a call.

 No phone connected.

 Phone signal strength indicator.

 Phone battery level indicator.

 **Bluetooth**. Indicates that a **Bluetooth®** wireless technology device is connected.

 Tick: Indicates that a **Bluetooth** wireless technology device is paired.

 Voicemail: Press and hold to dial the stored voicemail number.

 Scroll bar up arrow: Use to scroll up lists of detected phones, calls, or phonebook entries.

 Scroll bar down arrow: Use to scroll down lists of detected phones, calls, or phonebook entries.

## STEERING WHEEL CONTROLS



E 150755

1. Press to scroll back through received calls, the Last 10 list, and finally to exit the list.
2. Increase the volume when in a call, scroll up a displayed list, or a number listed for a stored contact.
3. Press to scroll to the Last 10 list and received calls.
4. Decrease the volume when in a call, or scroll down a displayed list or a number listed for a stored contact.
5. Press to answer an incoming call. Press to end a call. Press and release to dial a number/contact. Press and release to access the Last 10 dialled list. Press and hold to access the phonebook list view.

**Note:** When scrolling through a phonebook or the Last 10 list, each contact is also displayed in the Message centre.