

7. **Station list** (FM only): Select to view a list of available stations on the waveband. The list can be sorted by **Frequency**, **Name** or **PTY** (pop, news, sport, etc.), by selecting the appropriate soft key. Touch to select the chosen station.
If the stations are sorted by category, touch the chosen category to view and select a corresponding station.
 8. **Frequency input**: Select to enter a known frequency of a station on the current waveband, using the numeric keypad that appears. Select **OK** or wait for 2 seconds to tune to the entered frequency.
 9. **Station presets**: Each waveband has 6 preset positions.
 - Touch and release to tune to the station stored on that preset.
 - Touch and hold to store the current station on that preset (the radio will mute while the station is stored and then beep).
 - Use the seek buttons on the steering wheel, to change to the next or previous preset station.
- **Alternative Frequency (AF)**: Select to allow the radio to automatically re-tune to a stronger AF for the current station. This is useful on a journey where the vehicle travels through different transmitter areas.

RADIO DATA SYSTEM (RDS)

Your radio is equipped with RDS, which enables the audio unit to receive additional information with normal FM radio signals.

Note: *Not all FM radio stations broadcast RDS information.*

Select **Settings** to view or alter RDS settings.

- **Traffic/News**: Provides local travel or news information.
- **Regionalisation (REG)**: Select to prevent the radio tuning into an alternative local station that has a stronger signal.