

2. Touch the **Auto zoom** soft key. The soft key will be highlighted when auto zoom is enabled.

**Note:** *The highest level to which the map will zoom out, is the scale value set before the **Auto Zoom** feature is switched on.*

## SCREEN MODES

Touch the screen mode selection key to view a series of icons, each depicting a different screen mode (as detailed below). Touch the relevant icon to select the desired screen mode.



Full screen view.



Split screen view.



Shows a list of turn directions on the right half of the screen.



**Guidance screen:** Shows a detailed view of the next junction on the motorway or junction view on non-motorway roads, in the right half of the screen.



**Motorway information:** This view is only available when travelling on a motorway.

It displays automatically to show the remaining motorway exits along your route, or all exits on the current motorway when a route is not set.

To turn off the Guidance or Motorway information screens, proceed as follows:

1. From the **Nav menu**, touch **More....**
2. Select **Nav set-up**.
3. Touch **User settings**.
4. Touch **Guidance screen** or **Motorway information** to deselect the option.
5. Touch **OK** to confirm.

## SEARCH AREA

The navigation map database is divided into countries, or areas of countries, called search areas. When setting a route, the destination (or waypoint) entered must be in the currently selected search area.

Before attempting to set a destination or waypoint, set the correct search area as follows:

1. Select **Destination entry** from the main navigation menu.
2. Touch **More....**
3. Touch **Search area**.
4. Scroll through the list and select the 3 letter code that corresponds to the desired destination area.
5. Select **OK**. The Destination entry menu is shown and the information window shows the currently selected search area.