



- 1 touch open and close, press firmly at the front or rear of the switch and release.


**Note:** Long Wheel Base (LWB) vehicles, fitted with standard rear seats, feature an additional roof blind switch. The switch is located on the rear face of the centre console.

## 4. Panoramic roof switch:

-  Wherever possible, remove any snow, ice, dirt, and leaves, etc., from the panoramic roof mechanism, before closing. Failure to do so, may damage the panoramic roof mechanism.
-  To prevent accidental damage, make sure that any roof rack load will not interfere with the opening of the panoramic roof.
- Press lightly at the rear of the switch to tilt the roof. Once tilted, lightly press again to open the roof.
- From the fully open position, press lightly at the front of the switch to close to the tilt position, then press lightly again to close fully.
- 1 touch open and close, press firmly at the front or rear of the switch and release.

**Note:** The panoramic roof will operate for 40 seconds after the ignition is turned off, provided that a front door is not opened.

## ANTI-TRAP PROTECTION

-  **Before closing a window or the sunroof, make sure that no occupants have any part of their body in a position where it could be trapped. Even with an Anti-trap system, death or serious injury could occur.**

Anti-trap protection will stop window or sunroof movement if an obstruction or resistance is detected. Check the window or sunroof, and its aperture, and remove any obstructions (e.g., ice, etc.).


If it is still necessary to raise the window or close the sunroof, the override procedure is as follows:

1. Attempt to close the window/sunroof; Anti-trap will prevent closure and lower the window/open the sunroof slightly.
2. Within ten seconds, attempt to raise the window/close the sunroof again; Anti-trap will prevent closure and lower the window/open the sunroof slightly.
3. Attempt to close the window/sunroof for a third time. This time hold the switch in the close position. Hold until closed.

**Note:** If this procedure fails to remove the blockage, the window operation may need to be reset. See **236, WINDOW RESET**.

**Note:** The sunroof's Anti-trap mechanism works differently and does not require reset if activated. See **236, SUNROOF RESET**.

## SIDE WINDOW BLINDS

-  **Before operating the side window blinds, make sure that no objects or parts of the body are in a position to obstruct its operation.**

Before operating the side window blinds, it is important to note the following:

- The rear window switches also operate the respective side window blind.
- A side window blind will only operate if the window is fully closed.
- The side window blinds can only be fully raised or fully lowered. There is no part-way position.

- The side window blinds feature an anti-trap function. If movement is restricted while being raised, the side window blind will stop and return to the lowered position.
- The side window blinds also feature an anti-play/tamper function. If a side window blind is operated repeatedly in a short space of time, operation will be inhibited for approximately 60 seconds.
- The side window blinds will not operate if the temperature inside the vehicle is below -10°C (14°F).

To raise the side window blind, pull and release the rear window switch.

To lower the side window blind, push and release the rear window switch.

**Note:** *The side window blinds will operate for 5 minutes after the engine has been switched off, provided the windows are fully closed.*