

Warning lamps

DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Flashes when DSC is active.

If there is a fault, it will remain illuminated and the Message centre will display **DSC NOT AVAILABLE**. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will sound and a confirmation message will be displayed in the Message centre.

ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

AIRBAG (AMBER)



Illuminates as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly.

Seek qualified assistance as soon as possible.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

LOW FUEL WARNING (AMBER)



Illuminates when the fuel level is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler cap.

AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when the Automatic Speed Limiter (ASL) is active.

FOLLOW MODE (AMBER)



Illuminates when the Adaptive Cruise Control (ACC) system is in follow mode.

EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.