

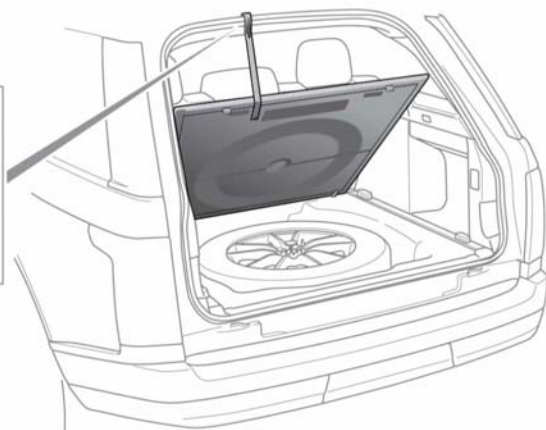
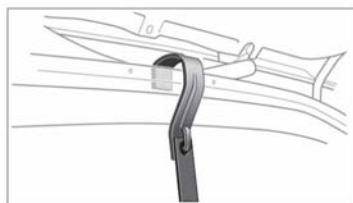


TOOL KIT

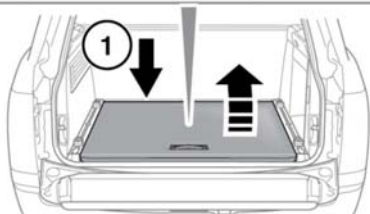

E152047

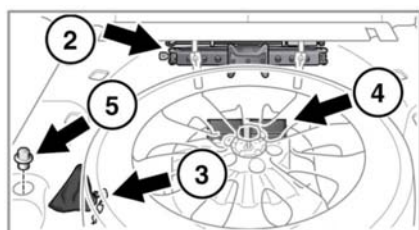

E152216

Note: Tool types and positions may vary from the illustration.

1. Loadspace floor panel.
2. Jack.
3. Spare wheel lift assist tool.
4. Tool kit - located under the spare wheel.
See 275, REMOVING THE SPARE WHEEL.

5. Locking wheel nut adaptor.

Note: Examine the jack occasionally, clean and grease the moving parts, particularly the screw thread, to prevent corrosion.

Note: Take careful note of the stowage position for each tool, as it is important to return them to their correct position after use.

REMOVING THE SPARE WHEEL



Remove the spare wheel before jacking the vehicle, to avoid destabilising the vehicle when raised.



Wheels are heavy, and if handled incorrectly, may cause injury. Use extreme caution when lifting, lowering, and manoeuvring the wheels.



Always secure the spare wheel, or the removed wheel, in the correct position, using the retaining bolt.



Do not stow the wheel while the vehicle is raised on the jack.