

If the Lane departure warning system is not available, or a fault is detected, the amber general warning/information message warning lamp will illuminate in the Instrument panel. See

**50, GENERAL WARNING/INFORMATION MESSAGE (AMBER).**

### TRAFFIC SIGN RECOGNITION

The Traffic sign recognition system uses a camera, mounted on the front of the interior rear-view mirror, to monitor oncoming road traffic signs.



**The Traffic sign recognition system is a driver aid only. It remains the responsibility of the driver to operate the vehicle in an appropriate and safe manner.**

The Traffic sign recognition system is able to identify speed limit signs, and no overtaking signs. Once detected, the sign is displayed in the Instrument panel.

**Note:** *In order for the Traffic sign recognition system to operate correctly, make sure the windscreen is kept clean and the camera's line of sight is not obstructed by labels, stickers, or any other objects.*

The Traffic sign recognition system can be switched **On** and **Off** through the **Driving Features** menu in the Instrument panel. The **Driving Features** menu can also be used to change the Traffic sign recognition **Speed Alert** settings.

If a speed limit is exceeded, a red border will flash around the traffic sign display in the Instrument panel.

**Note:** *The Traffic sign recognition system will only operate at speeds, less than 250 km/h (155 mph).*