


## VIDEO MEDIA PLAYER CONTROLS

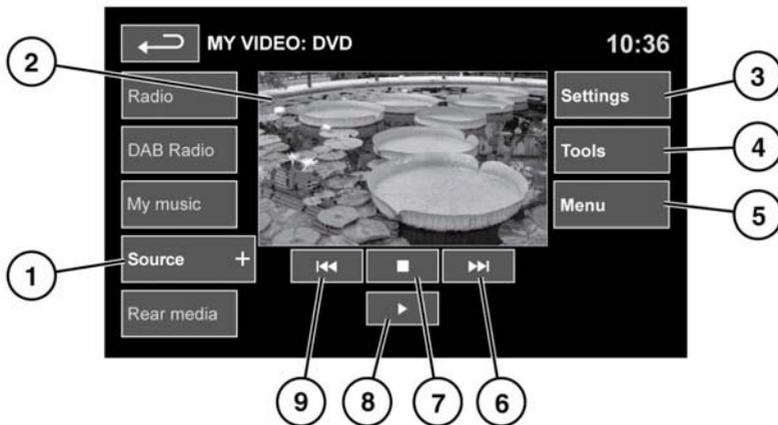

E151161

- 1. Source:** TV band/video input selection. Touch to view and select DVD or other forms of video media (CD/USB), provided that the relevant media is present. The selected option will be displayed.  
**Note:** After 5 seconds without use, the TV/My video menu will close.
- 2.** Preview screen for video media information: Touch to select full screen mode. Short touch the screen again to view the controls at any time. To return to preview mode, touch and hold the full screen view.
- 3. Settings.** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand), and **Audio settings**. **VOD** allows playing of DivX VOD content from a video media. The eight digit registration code will be displayed when the VOD soft key is touched. The player must also be registered with DivX. See **169, LICENSING**.
- 4. Tools:** The following options can be selected:
  - **GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
  - Subtitles.
  - Angle.
  - Audio.
  - Top menu.
- 5. Menu:** Select to view the Video media menu. On some screens, this may be replaced by a **Browse** soft key.
- 6.** Seek up: Select to view the next DVD chapter or to scroll through video media files.
- 7.** Select to pre-stop playback. A second touch will stop and reset the DVD.
- 8.** Select to start/restart play.
- 9.** Seek down: Select to view the previous DVD chapter or to scroll through video media files.