


## TOUCH SCREEN HOME MENU

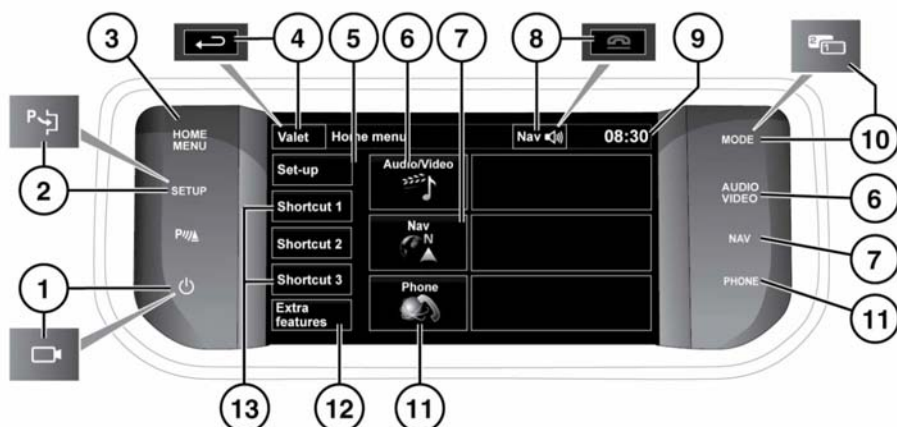

E149216

- ❗ Always run the engine during prolonged use of the Touch screen. Failure to do so, may discharge the vehicle's battery, preventing the engine from starting.
  - ❗ Avoid spilling or splashing liquids onto the Touch screen.
1. Press to turn the screen on/off. When proximity cameras are fitted, this icon is changed and the button will access cameras in the special views page. Touch the screen to display the options.
  2. Press to select the Touch screen **Set-up** menu. When Park assist is fitted, this icon is changed and the button should be pressed to activate Park assist.
  3. Press to select the **Home menu**.
  4. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key; touch to return to the previous screen displayed.
  5. Touch to select the Touch screen **Set-up** menu.
  6. Touch or press to select the **Audio/Video** menu, see **167, AUDIO/VIDEO CONTROLS**.
  7. Touch or press to select the **On road Navigation** menu. The current set destination is displayed.
  8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
  9. Touch to adjust the time/date.
  10. Touch to change mode. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.
  11. Touch or press to select the **Phone** menu.
  12. Press to select the **Extra features** menu.
  13. To change the shortcuts, see **76, TOUCH SCREEN SETUP**.