


## EXECUTIVE CLASS SEATS

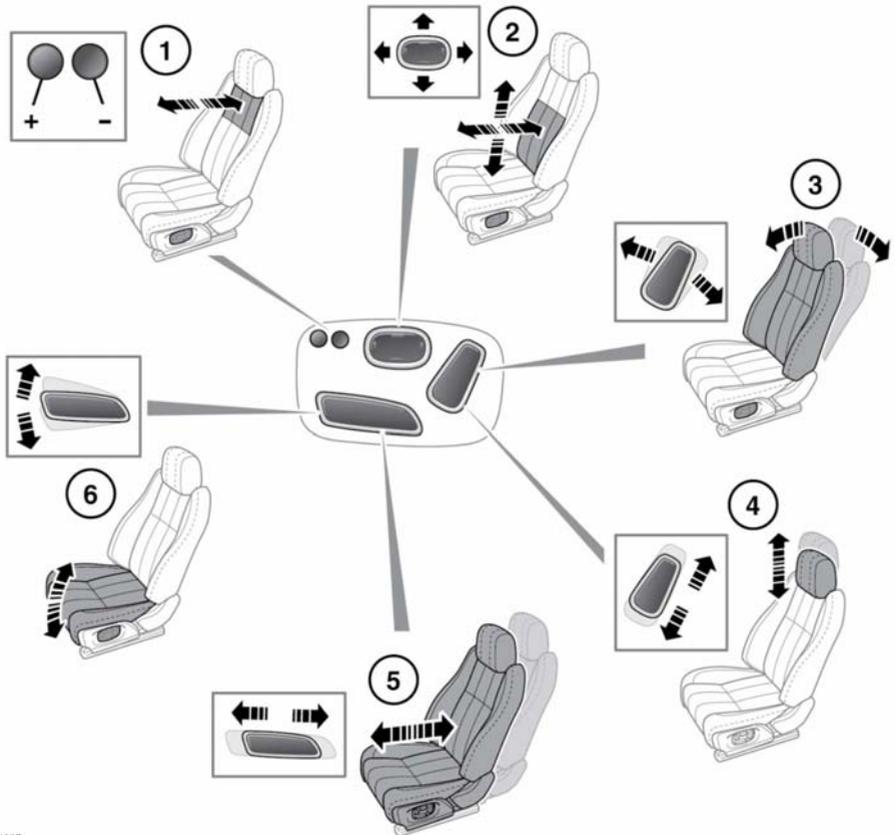

E144837


1. Upper seat back angle.
2. Lumbar support.
3. Seat back angle.
4. Head restraint height.
5. Forward and rearward position.
6. Cushion tilt.

The executive class seats also have:

- Climate control (see **86, REAR CLIMATE CONTROL**).
- Seat massage (see **82, SEAT MASSAGE**).

Movement of the front and rear passenger seats can be controlled using the driver's seat switches. To remotely control the front and rear passenger seats, select **Remote seats** from the **Front climate** Touch screen menu. For more information, see **79, CLIMATE CONTROL**.

# Rear seats

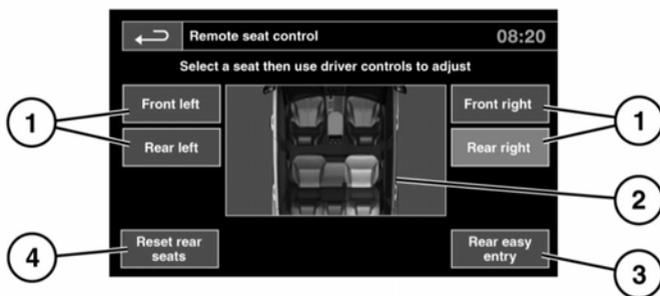

E161563

1. Touch to select the seat to be adjusted. Once selected, the driver can adjust the seat using the driver's seat switches.
2. Display, highlighting the selected seat.
3. **Rear easy entry:** Touch to turn Rear easy entry **On/Off**. When **On** is selected, the rear seats will automatically move to the home position when a rear door is opened, to allow easier entry and exit.
4. **Reset rear seats:** Touch and hold to enable the memory button **3**, on the driver's door to be used to reset the rear seats to the home position.