

7. Identify your device from the displayed list and select the corresponding **Pair and connect** option.

Note: *If more than 5 devices are detected, it may be necessary to use the scroll bar to see the entire list.*

8. When prompted, enter the PIN (Personal Identification Number) code into your device. See your device's operating instructions for more information.
9. Once your device is paired and connected to the system, a confirmation message will be displayed, before switching to the **My music, Bluetooth** view.

Note: *Due to the duration of a **Bluetooth**® wireless technology device search, it is advised that the time-out to home screen feature is switched off, before attempting to search for **Bluetooth**® wireless technology devices. This setting can be changed within **Set-up, Screen, Time out home**.*

CHANGING/DISCONNECTING A DEVICE

1. From the **Bluetooth** menu, select **Change device**.
2. Select **Disconnect**. A confirmation pop-up will appear, and then you will be given the option to **Search new** or select a different device from the list of paired devices.