

- ⚠ When a fuse box is exposed, take care to protect the box from moisture, and refit the access panel at the earliest opportunity.

1. To access the luggage compartment fuse boxes, open the rear tailgate. See **7, OPENING AND CLOSING THE TAILGATE**. Remove the access panel, by grasping the top of the panel and pulling sharply. A label on the rear of the access panel shows the circuits protected and the fuse locations.
  - When refitting the access panel, make sure that the 3 locating/securing pegs are aligned with their respective holes, before pushing the panel fully home.
2. Luggage compartment upper fuse box.
3. Luggage compartment lower fuse box.
4. To access the passenger compartment fuse box, open the glovebox. See **88, STORAGE COMPARTMENTS**. Press the top of the support stay at each end, and lower the glovebox into the footwell. A label on the rear of the glovebox shows the circuits protected and the fuse locations.
5. To access the engine compartment fuse box, remove the under bonnet cover. See **235, UNDER BONNET COVERS - REMOVAL**. Release the clip at each end of the fuse box cover.
6. Lift up the edge of the leaf screen panel just enough to allow removal of the fuse box cover.
7. Remove the fuse box cover. A label on the inside of the cover shows the circuits protected and the fuse locations.

## CHANGING A FUSE

- ⚠ Fit Land Rover approved replacement fuses of the same rating and type, or fuses of a matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.
- ⚠ If the replacement fuse blows after installation, the system should be checked by your Dealer/Authorised Repairer.

***Note:** Land Rover recommend that relays should only be replaced by qualified persons.*

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.