

2. Push the cover down firmly and fasten the turnbuckle clips.

UNBLOCKING WASHER JETS



Do not operate the washer jets during unblocking or adjustment. Windscreen washer fluid may cause irritation to the eyes and skin. Always read and observe the washer fluid manufacturer's instructions.

If a washer jet becomes blocked, use a thin strand of wire to unblock the jet, by inserting the wire into the jet. Make sure that the wire is completely removed after unblocking. The washer jet's position may also be adjusted, by inserting the point of a needle into the jet and gently repositioning it.

CHANGING A BULB



All lamps are either LED or xenon units and must only be replaced by a Dealer/Authorised Repairer.

WIPERS SERVICE POSITION

Before changing a front wiper blade, the wiper arms must be set to the Winter park position. See **62, WINTER PARK POSITION**

Note: *The Smart key must remain in the vehicle while the wiper blades are replaced.*

WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged, or power supply is interrupted.

Reset as follows:

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for 1 second.
3. Repeat the procedure on each window.

SUNROOF RESET

If the battery is disconnected or the power supply is interrupted while the sunroof is partially open, it may need to be recalibrated.

Once the battery is reconnected or the power supply is restored, recalibrate the sunroof as follows:

1. Switch the ignition on.
2. With the roof and blind closed, press the front of the roof switch and hold for 20 seconds. See **72, ELECTRIC WINDOWS**.
3. After 20 seconds, the sunroof will begin to move. Release the switch. Within 5 seconds, press and hold the front of the roof switch until the blind and roof complete a full open/close cycle.

Note: *The blind will open first and close last.*

4. Once the blind has stopped moving, release the switch.

The sunroof can now be operated as normal.