
Interior lights

INTERIOR LIGHTS

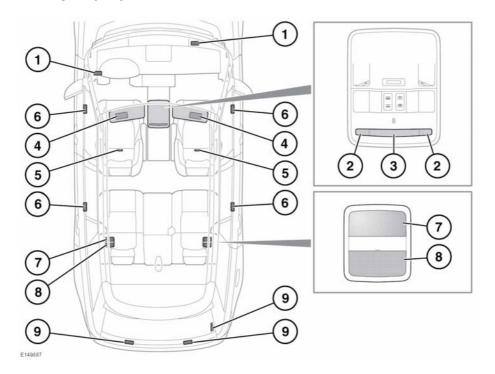

- Front seat footwell lamps: Automatically illuminate when the doors are opened, or the courtesy lamps are switched on manually.
- Front reading lamps: Touch the left or right side of the sensor lens briefly, to switch on/off.

Note: To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.

Front courtesy lamp: Touch the centre of the sensor lens briefly to switch on/off. To switch automatic illumination on or off, hold your finger on the lens until the lamp flashes. **Note:** To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.

In Auto mode, the lamps will illuminate when a door is opened.

- Vanity mirror lamp: Slide the cover open/shut for on/off.
- **5.** Rear seat footwell lamps: Automatically illuminate when the doors are opened.
- **6.** Puddle lamps: Automatically illuminate when the doors are opened.
- 7. Rear reading lamps: Touch the lens briefly to switch on/off.