

## Warning lamps

### LOW RANGE (GREEN)



Illuminates when Low range has been selected.

### CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive Cruise Control (ACC) is active.

### FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

### TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.

**Note:** *If the attached and connected trailer is fitted with LED lights, the bulb check may not be performed.*

### LANE DEPARTURE WARNING (GREEN)



Illuminates grey to confirm the Lane departure warning system is enabled. Recognised lane markings will illuminate green, otherwise they will illuminate grey.

### INTELLIGENT STOP/START OFF (WHITE)



Illuminates when the Hybrid Intelligent stop/start system has been switched off. The electric motor will still provide assistance, but the engine will run constantly.