

When **Parking exit** is selected, the space around the vehicle is assessed. If an exit manoeuvre is possible, instructions will be displayed in the Message centre.



Do not perform a Parking exit manoeuvre until the message **Drive forward with care** is displayed in the Message centre.

Note: The Parking exit feature will only operate when your vehicle has been parallel parked. Parking exit will not manoeuvre your vehicle from a perpendicular parking space.

Note: For Parking exit to operate correctly, your vehicle must be parked in a space where other vehicles or objects are either:

- Parked in front of your vehicle.
- Parked in front and behind your vehicle.

For all 3 Park assist features, follow the instructions displayed in the Message centre until the parking or exit manoeuvre has been completed.

Note: If the vehicle's speed exceeds 5 km/h (3 mph) during a Park assist manoeuvre, a speed warning message will be displayed in the Message centre until the vehicle's speed decreases to less than 5 km/h (3 mph). If the vehicle's speed exceeds 7 km/h (4 mph), Park assist will deactivate.

If a system fault is detected, a continuous tone will sound and a message will be displayed in the Message centre. Consult a Dealer/Authorised Repairer.

PARK ASSIST LIMITATIONS



Park assist is a supplement to, and not a replacement for, good observation and a safe driving style. It is the driver's responsibility, at all times, to make sure that reversing manoeuvres are carried out safely.

Park assist may provide inaccurate results if:

- The size or shape of the parking space changes after it was measured.
 - There is an irregular kerb alongside the parking space, or the kerb is covered with leaves, snow, etc.
 - The vehicle is being used to transport a load that extends beyond the perimeter of the vehicle.
 - The vehicle had a repair or alteration that was not approved by a Land Rover Dealer/Authorised Repairer.
 - The vehicle has been fitted with non-approved wheels or tyres, or there is significant tyre wear.
 - One of the parked vehicles has an attachment at a raised height, such as a flat bed, snow plough, or cherry picker.
 - The parking space is located on a corner or curve.
 - The sensors are dirty or covered in mud, ice, or snow.
 - The weather is foggy, raining, or snowing.
 - The road surface is bumpy such as gravel.
 - A tow bar or trailer hitch is fitted.
 - A trailer is connected.
- Note:** If a trailer is connected to a Land Rover approved trailer socket, the Park assist system will be disabled.
- It encounters an obstruction that is thin or wedge shaped.
 - It encounters an obstruction that is elevated and/or protruding, such as ledges or tree branches.
 - It encounters an obstruction with corners and sharp edges.