


## RADIO CONTROLS

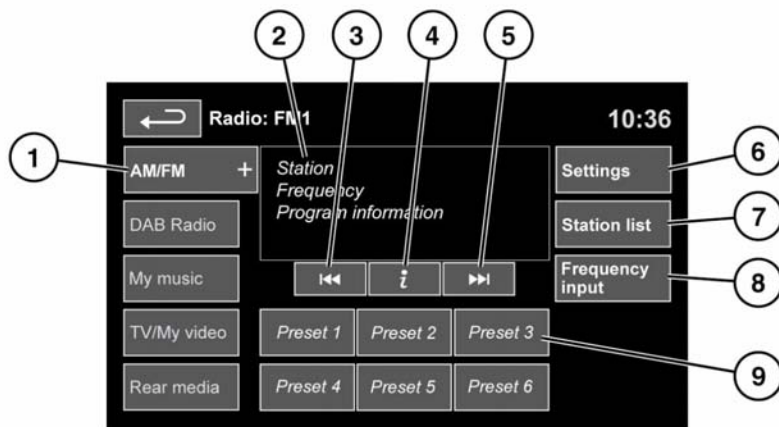

E149957

**⚠ In the interest of safety, only operate or adjust the system when it is safe to do so.**

**⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

1. **AM/FM:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close. The waveband selection box will close automatically after 5 seconds without use.
2. Displays information about the current station.
3. Seek down:
  - Short touch to auto-seek down the frequency to the next radio station.
  - Long touch to activate manual-seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

***Note:** When manual-seek is selected, auto-seek cannot be selected for approximately 10 seconds.*

4. Information: More information from the broadcasting station.
5. Seek up:
  - Short touch to auto-seek up the frequency to the next radio station.
  - Long touch to activate manual-seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
6. **Settings:** Touch to view and activate/deactivate the following features: **RDS**, **Traffic**, **News**, **AF**, and **REG**. See **174**, **RADIO DATA SYSTEM (RDS)**.