


## LABEL LOCATIONS



Warning labels attached to your vehicle showing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the vehicle's ignition is switched on.

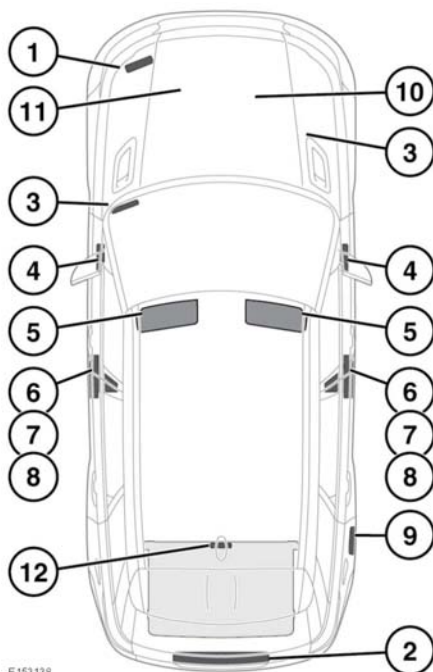

E 153 139

1. Bonnet locking platform - Air conditioning label.
2. Top of the battery - Battery warning symbols.

3. The Vehicle Identification Number (VIN) is stamped on a plate, visible through the lowest part of the left side of the windscreen. The number is also stamped into the right side suspension tower.

**Note:** If you need to communicate with a Dealer/Authorised Repairer, you may be asked to quote the VIN number.

4. End of the fascia (passenger side) - Passenger airbag label.
5. Sun visor - Airbag label, vehicle handling label.
6. Base of the B pillar-VIN number.
7. Base of the B pillar or inside, base of front door - Tyre pressure label, airbag warning label, vehicle build date plate (Australian vehicles only).
8. Midway up the B pillar - Side airbag warning label.
9. Inside the fuel filler flap - Fuel label.
10. Engine number: V8 and V6 Petrol - The number is located on the front of the right side camshaft cover.
11. Engine number:
  - V6 Diesel (China only) - The number is located on the front of the left side camshaft cover.
  - V8 Diesel - The number is located on the top of the engine, on the left side of the inlet manifold.
12. Underside of the loadspace cover - the loadspace cover warning label.

It is important that you are familiar with these subjects to make sure that your vehicle and its features are used safely.