
## **AIRBAGS**

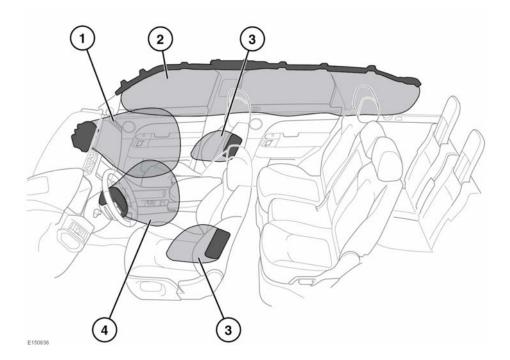

- 1. Passenger front airbag.
- 2. Curtain airbag.
- 3. Side airbags.
- 4. Driver's front airbag.

**Note:** The general location of airbags fitted to the vehicle are marked by the word AIRBAG.

Always contact your Dealer/Authorised Repairer if:

- An airbag inflates.
- The front or sides of the vehicle are damaged.
- Any part of the airbag system shows signs of cracking or damage, including trim covering the airbags.

## **AIRBAG OPERATION**



For the airbags to operate correctly, the roof lining and door post trims must be in good condition, correctly fitted and free from obstruction. Any damage, wear or incorrect fitment, should be referred to your Dealer/Authorised Repairer as soon as possible for examination and repair.



Do not allow passengers to obstruct the operation of the airbags by placing any part of their person, or any objects, in contact with, or close to, an airbag module. Only use approved accessories (e.g. seat covers).