


FLUID FILLER LOCATIONS

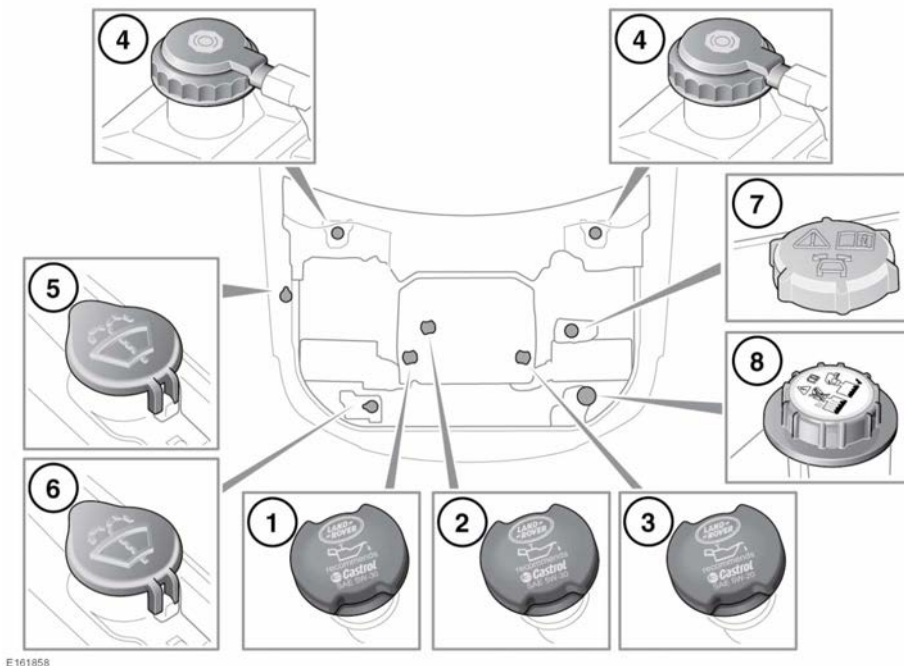

E101858

1. Engine oil filler cap (V8 diesel).
2. Engine oil filler cap (V6 diesel).
3. Engine oil filler cap (V6 and V8 petrol).
4. Brake fluid reservoir cap.
Note: The brake fluid reservoir cap is always located on the driver's side of the vehicle.
5. Windscreen washer fluid filler cap (all vehicles).
6. Windscreen washer fluid filler cap (cold climate vehicles only).
7. Dynamic response fluid reservoir cap.
8. Engine coolant filler cap.



Do not drive if there is a possibility that leaked fluid will come into contact with a hot surface, such as the exhaust.

CHECKING THE ENGINE OIL LEVEL



Check the engine oil weekly. If any significant or sudden drop in oil level is noted, seek qualified assistance.



If the message **ENGINE OIL PRESSURE LOW** is displayed, stop the engine as soon as it is safe to do so and seek qualified assistance. Do not start the engine until the cause has been rectified.

Prior to checking the oil level, make sure that:

- The vehicle is on level ground.