


FOLDING ARMREST

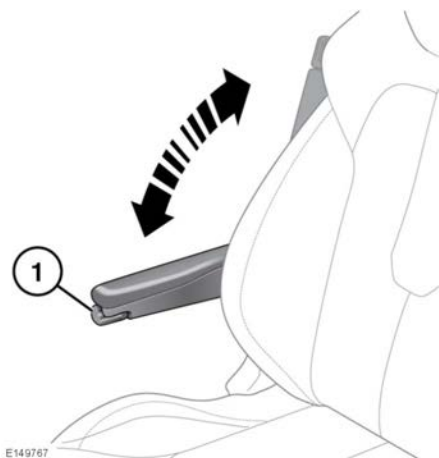


Use the adjuster wheel (1) to set the required height. The folding armrest may be stowed by moving to the vertical position.

SEAT POSITION MEMORY

Once you have adjusted the power-operated driver's seat, steering column (see **26, ADJUSTING THE STEERING WHEEL**) and exterior mirrors (see **63, EXTERIOR MIRRORS**) for your ideal driving position, the settings can be stored for future use.

Passenger seat position can also be changed, follow the same procedure as for the driver's seat. Press the memory (**M**) button to store the current seat settings.

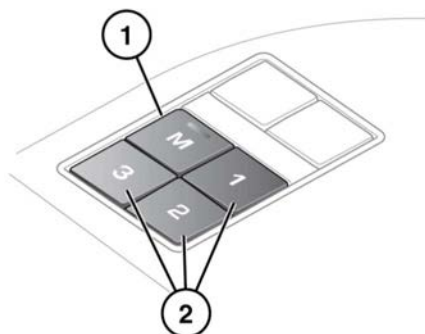

E139010

1. Press the memory (**M**) button to activate the memory function.
2. Press one of the preset buttons within 5 seconds, to store the current settings.
MEMORY (1, 2 or 3) SETTINGS SAVED will be displayed in the Message centre, accompanied by an audible chime to confirm the settings have been stored.
***Note:** A seat position will only be stored during the 5 second active period.*
***Note:** Any existing settings will be over-written when storing a new position.*
3. To recall a stored position, press the relevant preset button. **MEMORY (1, 2 OR 3) RECALLED** will be displayed in the Message centre.

***Note:** The memory function for all passenger seats will not trigger any messages in the Message centre.*