

Warning lamps

Note: This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.

HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met. See **150, HDC CONTROLS**.

If the lamp flashes, HDC has been selected but the operating conditions are not being met or HDC fade-out is occurring.

LOW RANGE (GREEN)



Illuminates when Low range has been selected.

CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive cruise control (ACC) is active.

FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.

Note: If the attached and connected trailer is fitted with LED lights, the bulb check may not be performed.

LANE DEPARTURE WARNING (GREEN)



Illuminates grey to confirm the Lane departure warning system is enabled. Recognised lane markings illuminate green, otherwise they illuminate grey.

INTELLIGENT STOP/START OFF (WHITE)



Illuminates when the Hybrid Intelligent stop/start system has been switched off. The electric motor will still provide assistance, but the engine will run constantly.