

When Parking exit is selected, the space around the vehicle is assessed. If an exit manoeuvre is possible, instructions will be displayed in the Message centre.



Do not perform a Parking exit manoeuvre until the message **Drive forward with care** is displayed in the Message centre.

Note: The Parking exit feature will only operate when your vehicle has been parallel parked. Parking exit will not manoeuvre your vehicle from a perpendicular parking space.

Note: For Parking exit to operate correctly, your vehicle must be parked in a space where other vehicles or objects are either:

- Parked in front of your vehicle.
- Parked in front and behind your vehicle.

For all three Park assist features, follow the instructions displayed in the Message centre until the parking or exit manoeuvre has been completed.

Note: If the vehicle's speed exceeds 5 km/h (3 mph) during a Park assist manoeuvre, a speed warning message will be displayed in the Message centre until the vehicle's speed decreases to less than 5 km/h (3 mph). If the vehicle's speed exceeds 7 km/h (4 mph), Park assist deactivates.

If a system fault is detected, a continuous tone will sound and a message will be displayed in the Message centre. Consult a Dealer/Authorised Repairer.

PARK ASSIST LIMITATIONS



Park assist is a supplement to, not a replacement for, good observation and a safe driving style. It is the driver's responsibility, at all times, to make sure that reversing manoeuvres are carried out safely.

Park assist may provide inaccurate results if:

- The size or shape of the parking spaces changes after it was measured.
- There is an irregular kerb alongside the parking space or the kerb is covered with leaves, snow etc.
- The vehicle is being used to transport a load that extends beyond the perimeter of the vehicle.
- The vehicle had a repair or alteration that was not approved by a Land Rover Dealer/Authorised Repairer.
- The vehicle has been fitted with non approved wheels or tyres or there is significant tyre wear.
- One of the parked vehicles has an attachment at a raised height such as a flat bed, snow plough or cherry picker.
- The parking space is located on a corner or curve.
- The sensors are dirty or covered in mud, ice or snow.
- The weather is foggy, raining or snowing.
- The road surface is bumpy, such as gravel.
- A tow bar or trailer hitch is fitted.
- A trailer is connected.

Note: If a trailer is connected to a Land Rover approved trailer socket, Park assist will be disabled.
- It encounters an obstruction that is thin or wedge shaped.
- It encounters an obstruction that is elevated and/or protruding, such as ledges or tree branches.
- It encounters an obstruction with corners and sharp edges.