

Note: The **Brakes Overheating** message is only available with SVR vehicles.



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system.

Stop the vehicle as soon as safety permits and check and top up the brake fluid, if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

PARKING BRAKE (RED)



Illuminates when the Electric parking brake (EPB) is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

BATTERY CHARGE (RED)



Illuminates as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp remains on or illuminates while driving, there is a fault with the battery charging system. Seek qualified assistance urgently.

SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled.

The lamp will extinguish when the relevant seat belt is buckled.

Note: Objects on the front passenger seat may activate the Seat belt reminder. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See **28, USING THE SEAT BELTS**.

LANE DEPARTURE WARNING (RED)



If the Lane departure warning system detects that the vehicle has crossed either of the lane markings that it is travelling within, without activation of the appropriate direction indicator, then the relevant lane will illuminate red. This may also be accompanied by a vibration felt through the steering wheel.

HYBRID SYSTEM BATTERY FAULT (RED)

Note: All hybrid vehicles, except Chinese hybrid vehicles.



Illuminates if the Hybrid high voltage system is unable to shut down, and is accompanied by a warning message in the Message centre. For more information, see **104, HYBRID SYSTEM WARNING MESSAGES**.

ENGINE/TRANSMISSION (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp illuminates when the engine is running, there is an emissions related fault with the engine or transmission. The vehicle can be driven but may enter limp-home mode, with the possibility of reduced performance. Seek qualified assistance as soon as possible.