


## Rear seats



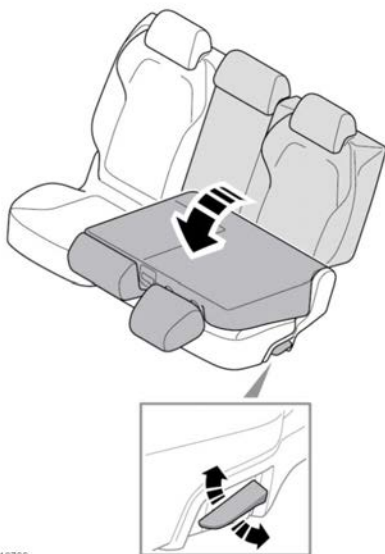

The front passenger seat position can be adjusted to provide more space for the rear seat occupants.

**Note:** The Passenger seat away function does not operate if the front passenger seat belt is fastened.

### FOLDING AND RAISING THE REAR SEATS



E149769

-  **Always make sure that objects carried in the vehicle are secured properly.**
-  **Never allow passengers to travel in the load space under any circumstances.**
-  **Make sure that when the seatback is raised, the locking mechanism is fully engaged.**
-  **When raising the rear seats, make sure that the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.**




**Make sure the head restraints are raised to the correct position before the seats are used by a passenger.**

Raise the release lever. The seatback will fold down against the seat cushion. Lift the seatback to raise to the upright position and make sure that the seatback is locked firmly into position.

The split-fold rear seat can be folded to accommodate large loads or partially folded, to accommodate large loads and still retain seating for passengers.

### REAR SEAT ACCESS

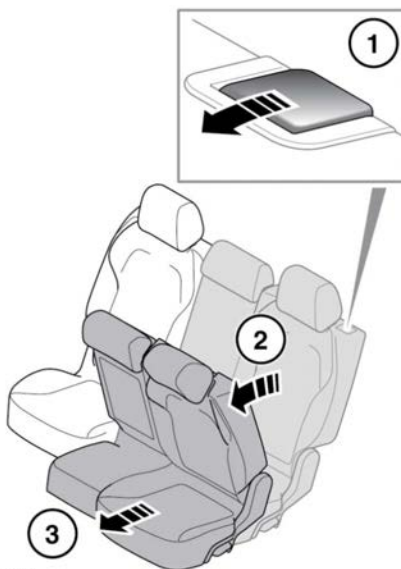

E150695

**To access the third row seats:**

1. Pull the seatback lever forwards.
2. Fold the seatback forwards.
3. Slide the seat forwards.

To return the seat to the upright position, slide the seat rearward and raise the seatback until the latching mechanism clicks into position.



**Make sure that when the seatback is raised, the locking mechanism is fully engaged.**



**When raising the rear seats, make sure that the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.**



**Make sure that the head restraints are raised to the correct position before the seats are used by a passenger.**