

- To select the next track on the chosen audio source - CD, MP3 etc.
- When the telephone is in use, press to scroll up lists of calls or phonebook entries.
- To select the next TV channel on the channel list or the next DVD chapter.

Long press:

- To auto seek up the frequency to the next radio station.

9. Press to decrease the volume for any source.

10. MODE:

- Short press to scroll through all the Audio/Video sources.
- Long press to scroll through the Audio/Video source sub-selections, e.g. in My music: iPod, Bluetooth, stored CD and CD.

11. Seek down:

Short press:

- To select the previous radio preset.
- To select the previous track or start of the current track on the chosen audio source - CD, MP3 etc.
- When a telephone is in use, press to scroll down lists of calls or phonebook entries.
- To select the previous TV channel on the channel list or the previous DVD chapter.

Long press:

- To auto seek down the frequency to the next radio station.

AUDIO SETTINGS


To view the **Audio/Video** menu, press the **AUDIO VIDEO** hard key. Touch the **Settings** soft key, and then select **Audio settings** to access the **Audio settings** menu.

To adjust the sound settings:

1. Touch the **+** or **-** soft keys to adjust the **bass**, **treble** or **subwoofer** levels.
2. If **Meridian Surround** is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield** or select **Stereo** to switch the surround sound off.
3. If **Meridian Signature Reference** is fitted, select **3D surround** and touch **DPLIIz**, **DTS Neo:X** or **Meridian Trifield 3D** to activate 3D surround mode.

Note: Surround sound options are not available for certain sources where the surround sound mode is set automatically.

To adjust balance and fade:

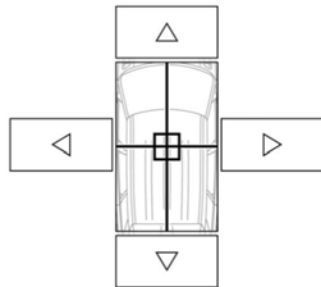

E150928

1. From the sound settings menu, select **Balance/Fade**.
2. Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.