


LIGHTING CONTROL

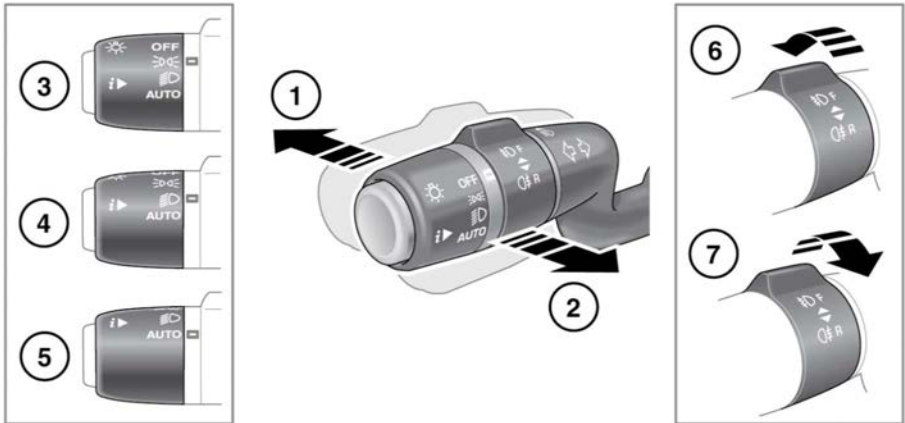

E160313

1. With the headlamps on, push the control away from the steering wheel to select high beam. The warning lamp illuminates. See **53, HIGH BEAM (BLUE)**.
2. Pull the control towards the steering wheel and release to flash the high beam on and off. The high beam remains on for as long as the switch is held.
3. Side lamps.
4. Headlamps.
5. **AUTO:** With Auto lamps selected, when ambient light fades and the ignition is on, the side lamps, tail lamps, low beam headlamps and number plate lamps switch on automatically. Headlamp courtesy delay, High beam assist and Windscreen wiper detection may also be activated.
6. Front fog lamps: Operates only while the side lamps, headlamps or Auto lamps are selected. Turn the collar away from the steering wheel and release. The warning lamp illuminates. See **53, FRONT FOG LAMPS (GREEN)**.
7. Rear fog lamps: Operates only while the side lamps, headlamps or Auto lamps are selected. Turn the collar towards the steering wheel and release. The warning lamp illuminates. See **52, REAR FOG LAMP (AMBER)**.

Note: Low ambient light levels, caused by adverse weather conditions, may also cause Auto lamps to activate.

DAYTIME RUNNING LAMPS

With the lighting control in the **OFF** position, Daytime running lamps will switch on automatically under the following conditions:

- The engine is running.
- The gear selector is out of Park (**P**).
- The Electric parking brake (EPB) is not applied (is released) - market dependent.