

- With the seat belt unfastened, unreel the seat belt to the limit of its travel. Check that it unreels smoothly with no snatches or snags. Allow the belt to fully retract, again checking for smooth operation.
- Partially unreel the seat belt, then hold the tongue plate and give a quick forward pull. The mechanism must lock and prevent any further unreeling.

If any of the seat belts fail to meet those criteria, immediately contact your Dealer/Authorised Repairer.

## SEAT BELT PRE-TENSIONERS

Seat belt pre-tensioners are fitted to the front and 2nd row outboard seats and activate in conjunction with the Supplementary restraint system (SRS), to provide extra protection in the event of a severe frontal impact. They automatically reduce any slack in a seat belt, to reduce forward movement of a seat occupant.



**The seat belt pre-tensioners will activate only once and must then be replaced. Failure to replace them will reduce the effectiveness of the SRS, in reducing the risk of serious injury or death in the event of an accident.**



**After any impact, the seat belts and pre-tensioners must be checked and if necessary, replaced by a Dealer/Authorised Repairer.**

## SEAT BELT REMINDER

Seat belt reminder commences when the vehicle is in motion and the driver's belt is unbuckled. Dependent on the market, the warning indicator in the Instrument panel illuminates (See **51, SEAT BELT (RED)**) and an audible chime sounds. The visual and audible warnings applicable to the Seat belt reminder feature are market dependent, to meet individual market requirements. The warning signals given may also change depending on whether the vehicle is stationary or when the vehicle's speed exceeds a pre-determined threshold. In certain markets, the Seat belt reminder feature also applies to the front passenger seat.

The Message centre also displays a front and rear Seat belt reminder that warns the driver when the seat belt of any occupied seat is not fastened or is unfastened during a journey.



E151118

- Each seating position is represented by a passenger icon, the colour and symbol of which indicates the seat belt status:
  - Tick - seat belt in the indicated position is fastened.
  - Cross - seat belt in the indicated position has been unfastened while the vehicle's ignition is on. This indicator will turn grey after 30 seconds.
  - Grey - seat belt not fastened.

# Seat belts

**Note:** The indicators will be displayed for 30 seconds each time there is a status change, e.g., a seat belt is unfastened or fastened, or a door is opened and then closed.

- In addition, an audible warning will sound under the following conditions:
  - The seat belt of an occupied front seat is not fastened or is unfastened during a journey.
  - A rear seat belt is unfastened.

**Note:** Objects placed on the front passenger seat may activate the Seat belt reminder warning chime and indicator. It is recommended that any objects placed on the front passenger seat are secured using the seat belt.