

Vehicle cleaning

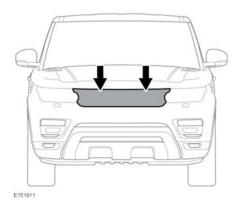

The front grille is removable to aid cleaning access.

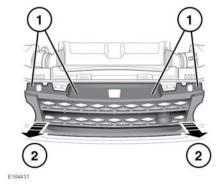

- 1. Remove the 4 securing clips from the grille.
- 2. Gently and evenly pull the grille forwards to release the 4 lower clips and remove the grille. Place the grille where it will not be damaged.

Ensure that the pressure washer nozzle is always at a distance of at least 500 mm (20 in) from the face of the radiator pack to prevent damage.

To clean the radiator pack and intercoolers through the lower bumper apertures, ensure that the pressure washer nozzle is always at a distance of at least 200 mm (8 in) from the openings.

To improve aerodynamics, some vehicles are fitted with active vanes that only open when the engine's temperature rises or when the air conditioning is turned on. The active vanes must be opened manually to allow access to clean any debris from the radiator pack after off-road driving.

- 1. Start the engine and allow it to run for a few seconds. See 106, STARTING THE ENGINE.
- 2. Switch the engine off.
- 3. Switch the ignition on. See 106, SWITCHING ON THE IGNITION.
- 4. Select Sand mode on the Terrain response system. See 148, TERRAIN RESPONSE OPERATION
- **5.** Switch the ignition off.

THE INTERIOR



Some cleaning products contain substances that are harmful and can cause health problems if used incorrectly. They may cause damage to the Interior.

FABRIC UPHOLSTERY



Do not polish the Instrument panel. Polished surfaces are reflective and may interfere with the driver's view.

Clean plastic or cloth faced surfaces with warm water and non-detergent soap and then wipe clean with a soft cloth.