

11. Touch or press to select the **Phone** menu.
12. Press to select the **Extra features** menu.
13. Touch to select a predetermined shortcut menu (if enabled).  
Use the **Setup** and **System** menus to enable/disable, choose or change which menus are displayed on the **Home menu** screen. See **75, SYSTEM SETTINGS**.

## TOUCH SCREEN USE

- ⓘ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.
- ⓘ Avoid spilling or splashing liquids onto the Touch screen.

**Note:** Do not wear gloves when operating the Touch screen.

## TOUCH SCREEN CARE

- ⓘ Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact your Dealer/Authorised Repairer.

## TOUCH SCREEN SETUP

Select **Setup** from the Touch screen **Home menu**. The **Setup** screen is divided into the following categories:

- Screen.
- System.
- Voice.
- Audio.
- Conversation assist.

## SCREEN SETTINGS

**Volume pop-up:** Displays the Volume pop-up on/off.

**Screensaver:** Changes the screensaver.

**Time out home:** Sub-menu selection screens can be set to revert to the **Home menu** after a predetermined length of time.

**Theme:** Changes the appearance of the Touch screen soft keys.

## SYSTEM SETTINGS

**Button feedback:** Select to turn the soft key confirmation tone on/off.

**Clock adjust:** Select **12** or **24** hour clock. Set the current time. Select **Date** to change the date or to alter the date format. Select **Set** to store the new settings.

**Note:** The clock can also be adjusted from the Touch screen time display.

**Home menu shortcuts:** Select items from the displayed list, to be highlighted and enable the shortcut menus to appear on the **Home menu** screen. Select **Clear** to deselect all the previous highlighted items and disable the shortcut menus from appearing on the **Home menu** screen. Alternatively, touch each highlighted item to deselect.

Select **Default** to enable the vehicle's predetermined shortcut menus to appear.

**Language:** Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

**Note:** Some languages are not yet available for both System display text and Voice control. In this event, it is necessary to select a separate language for Voice control.

**Volume presets:** Adjust the volume for the available systems (announcements, Parking aid, phone, Voice etc.).