


## TOUCH SCREEN HOME MENU

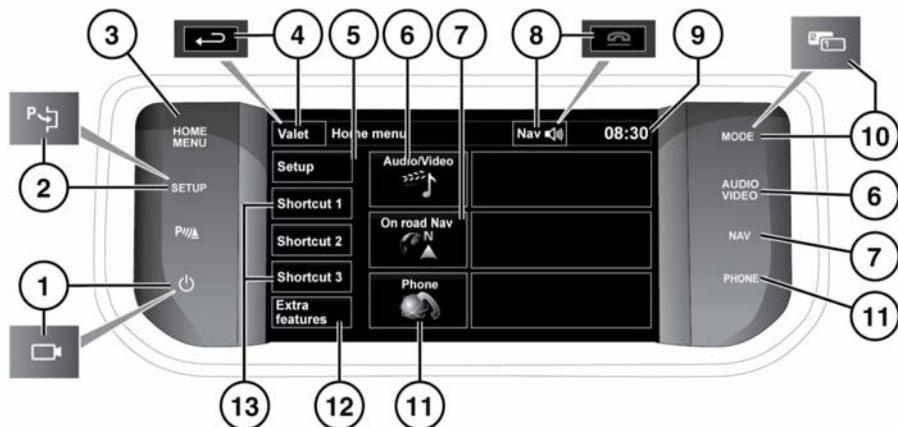

E150659

**⚠ Do not adjust the Touch screen controls or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**

**⚠** Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.

**⚠** Avoid spilling or splashing liquids onto the Touch screen.

**Note:** The Touch screen **Home menu** may differ due to the vehicle's specification and previous **Setup** selections.

1. Press to turn the Touch screen on/off. When proximity cameras are fitted, this icon is changed and the button will turn cameras on/off.
2. Press to select the Touch screen **Setup** menu. When Park assist is fitted, this icon is changed and the button should be pressed to activate Park assist.

3. Press to select the **Home menu**.
4. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed.
5. Touch to select the Touch screen **Setup** menu.
6. Touch or press to select the **Audio/Video** menu. See **154, AUDIO/VIDEO CONTROLS**.
7. Touch or press to select the **On road Navigation** menu. The current set destination is displayed.
8. While Navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust time/date.
10. Touch to scroll through audio/video sources. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.