


MANUAL SEATS

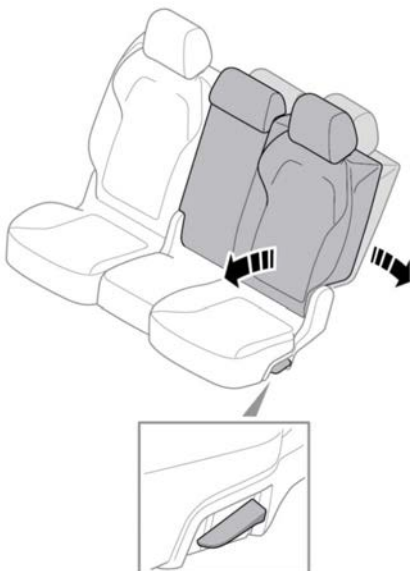

E149768

To adjust the angle of the seatback:

1. Lift and hold the adjustment lever.
2. Adjust the seatback to the desired angle.
3. Release the adjustment lever.



E150342

Forward and back adjustment.

PASSENGER SEAT AWAY



E150158

Use the switch for forward or rearward adjustment.