
DAB RADIO CONTROLS

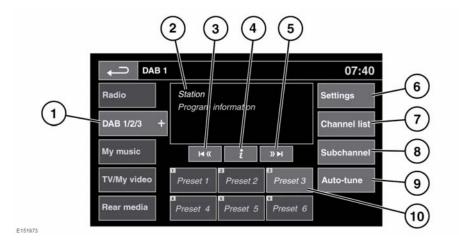

Note: Some types of body-mounted accessories (for example, external loadspace stowage devices) may affect the performance of this system.

Press the AUDIO/VIDEO button, or touch the Audio/Video icon from the Touch screen Home menu and then select the DAB Radio icon.

- DAB 1/2/3: Touch to view and select a DAB band (DAB 1, 2 or 3). The radio will tune to the last used channel on that band. Touch again to close.
- 2. Display showing the current channel, the associated ensemble and relevant DAB radio text
- 3. Seek down:
 - Short touch to seek a previously available channel.
 - Long touch to seek a previously available ensemble. The first channel in the new ensemble will be selected.
- Channel information: Touch to view DAB text and channel information.

- 5. Seek up:
 - Short touch to find the next available channel.
 - Long touch to find the next available ensemble. The first channel in the new ensemble will be selected.
- Settings: Touch to view the DAB Settings menu:
 - Options: To activate/deactivate FM
 Traffic and Link DAB and to alter DAB
 country and format settings (with the
 vehicle stationary).
 - Announcements: Select an alarm announcement and up to 3 other announcement types (traffic, news etc.) from the list. The selected announcements will interrupt the current programme when broadcast.
- Channel list: Touch to view a list of available ensembles and channels. The list can be sorted by Ensemble, Channel, Subchannel or by Category.