# **Navigation system**

4. From the sub-menu, select Edit or Delete.

#### EASY ROUTE

In Route options, Easy Route can be turned On or Off.

When **On** is selected, **Easy Route** changes the calculation parameters of **Alt**. (Alternative route), in order to reduce:

- Junctions.
- Turns.
- Turns that cross traffic.
- The priority of minor roads.
- Complex junctions and manoeuvres.

### LEARN ROUTE

In **Route options**, **Learn Route** can be turned **On** or **Off**.

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorise the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

### **VOICE GUIDANCE**

To turn Voice guidance on or off, but maintain Route guidance, proceed as follows:

- 1. Touch Nav menu on the navigation screen.
- Touch the Route voice guidance soft key. The soft key will be highlighted when Voice guidance is enabled.

# **CANCEL ROUTE GUIDANCE**

To clear the route, proceed as follows:

- 1. Touch Nav menu on the navigation screen.
- 2. Touch the Cancel guidance soft key.

### **QUICK POI SELECTION**

- 1. Touch the map to display the additional options.
- 2. Touch the Point Of Interest (POI) soft key.
- The screen shows 6 suggested categories, 5 of which can be selected as a quick Point Of Interest (POI).
- Select a Quick POI category, or touch More to see further POIs. Touch Ok to confirm a selection.
- The map with the POI icon(s) is displayed. Scroll the map to the POI icon and then touch **Set destination** to set and calculate the route.
- **6.** Touch **GO** to start the journey.

**Note:** Selected POIs can be hidden, if required, by selecting **Nav menu** followed by **Hide POI**.

**Note:** POI icons can only be displayed up to the 1 km (½ mile) zoom level.

## RESTORE SYSTEM DEFAULTS

From the Navigation menu, press **More...** and then select **Nav setup**. If you have made any changes to the system's default settings, use this menu to restore the original settings.

### **FAVOURITES**

This enables you to manage destinations such as, place of work, home, favourite restaurant, etc.

From the favourites sub-menu in Stored locations, you can save up to 400 stored favourites

- 1. From the Nav menu, touch More....
- 2. Select Stored locations.
- 3. Touch Favourite.
- To store a favourite, select Add from the sub-menu.