

4. From the sub-menu, select **Edit** or **Delete**.

EASY ROUTE

In **Route options**, **Easy Route** can be turned **On** or **Off**.

When **On** is selected, **Easy Route** changes the calculation parameters of **Alt.** (Alternative route), in order to reduce:

- Junctions.
- Turns.
- Turns that cross traffic.
- The priority of minor roads.
- Complex junctions and manoeuvres.

LEARN ROUTE

In **Route options**, **Learn Route** can be turned **On** or **Off**.

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorise the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

VOICE GUIDANCE

To turn Voice guidance on or off, but maintain Route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when Voice guidance is enabled.

CANCEL ROUTE GUIDANCE

To clear the route, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

QUICK POI SELECTION

1. Touch the map to display the additional options.
2. Touch the **Point Of Interest** (POI) soft key.
3. The screen shows 6 suggested categories, 5 of which can be selected as a quick **Point Of Interest** (POI).
4. Select a Quick POI category, or touch **More** to see further POIs. Touch **Ok** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon and then touch **Set destination** to set and calculate the route.
6. Touch **GO** to start the journey.

Note: *Selected POIs can be hidden, if required, by selecting **Nav menu** followed by **Hide POI**.*

Note: *POI icons can only be displayed up to the 1 km (½ mile) zoom level.*

RESTORE SYSTEM DEFAULTS

From the Navigation menu, press **More...** and then select **Nav setup**. If you have made any changes to the system's default settings, use this menu to restore the original settings.

FAVOURITES

This enables you to manage destinations such as, place of work, home, favourite restaurant, etc.

From the favourites sub-menu in Stored locations, you can save up to 400 stored favourites.

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Favourite**.
4. To store a favourite, select **Add** from the sub-menu.