

## VOICE SETTINGS

- **Command list:** View the categories and the acceptable voice commands. Pressing the **i** soft key next to any command shows alternative ways of saying the same command.
- **Voicetags:** View the categories. Select a category to manage the Voicetags for the chosen system. See **76, VOICE SETTINGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the Voice button).
- **Preferences:** Select to alter the following settings:
  - **Voice profile:** The Voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a Voice profile for either **User 1** or **User 2**, it is necessary to complete a training program first.

To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
  - **Voice feedback:** Select **On/Off**.
  - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the Voice system training program, designed to enable the system to better recognise the vocal characteristics of a user. Select **User 1** or **User 2** and follow the on screen and audible instructions. See **182, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **181, USING VOICE CONTROL**.

## SELECTING VALET MODE

While in Valet mode, the loadspace and glovebox are locked, preventing access to unauthorised persons, for example, a parking attendant. The Touch screen is also inhibited, preventing access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered.

### To select Valet mode:

1. From the **Home menu**, select **Valet**.
2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet mode activated** is displayed to indicate that a PIN has been accepted.

The loadspace and glovebox are now securely locked in Valet mode and the **Valet mode On** screen is displayed.

## DESELECTING VALET MODE

1. When you re-enter the vehicle, select **Valet**.
2. Enter your memorable 4 digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that a PIN has been accepted.

- The loadspace and glovebox return to the previously set security requirement.
- The Touch screen is enabled.

**Note:** If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.