## **VOICE SETTINGS**

- Command list: View the categories and the acceptable voice commands.
  Pressing the i soft key next to any command shows alternative ways of saying the same command.
- Voicetags: View the categories. Select a category to manage the Voicetags for the chosen system. See 76, VOICE SETTINGS.
- Operating guide: View brief Voice system instructions. Select Voice tutorial for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the Voice button).
- Preferences: Select to alter the following settings:
  - Voice profile: The Voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is Standard. To build a Voice profile for either User 1 or User 2, it is necessary to complete a training program first.

To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.

- Voice feedback: Select On/Off.
- Feedback volume: Adjust using the +/buttons. It is not possible to reduce the volume to zero.
- Voice training: Select to access the Voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.
  Select User 1 or User 2 and follow the on screen and audible instructions. See 182, VOICE TRAINING.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **181**, **USING VOICE CONTROL**.

## **SELECTING VALET MODE**

While in Valet mode, the loadspace and glovebox are locked, preventing access to unauthorised persons, for example, a parking attendant. The Touch screen is also inhibited, preventing access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered.

## To select Valet mode:

- 1. From the **Home menu**, select **Valet**.
- 2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled or incorrectly entered, you will be prompted to enter the PIN again.
- Valet mode activated is displayed to indicate that a PIN has been accepted.

The loadspace and glovebox are now securely locked in Valet mode and the **Valet mode On** screen is displayed.

## DESELECTING VALET MODE

- 1. When you re-enter the vehicle, select Valet.
- 2. Enter your memorable 4 digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that a PIN has been accepted.

- The loadspace and glovebox return to the previously set security requirement.
- The Touch screen is enabled.

**Note:** If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.