
## **REAR LAMP REMOVAL**

To change any of the rear bulbs, it is necessary to completely remove the lamp unit from the vehicle.




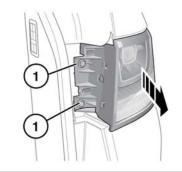

- 1. With the tailgate open, remove the trim panel and then remove the 2 screws from the inner edge of the unit.
- 2. Firmly but carefully, pull the unit away from the vehicle, releasing the 2 lugs situated at the rear of the lamp unit.
- Disconnect the electrical connector and remove the unit from the vehicle. Place face down on a flat surface covered in soft material, to prevent damage.

## REAR LAMP BULB REPLACEMENT

**Note:** The direction indicator lamp, stop lamp, and tail lamp are LED units, and cannot be serviced.

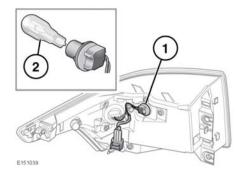

- 1. Reversing lamp.
- 2. Twist the relevant bulb unit and pull to access the bulb. Push, twist and pull to remove the bulb.

## REAR FOG LAMP BULB REPLACEMENT



Always find a safe place to stop, off the highway and away from traffic.



Apply the Electric parking brake (EPB) and engage Park (P).



Switch on the hazard warning lamps.



Place a warning triangle at a suitable distance behind the vehicle, facing towards oncoming traffic.




Disconnect any trailer/caravan from the vehicle.



Make sure all passengers and animals, are out of the vehicle and in a safe place away from the roadside.



If the vehicle has been driven recently, do not touch the exhaust system components until they have cooled.

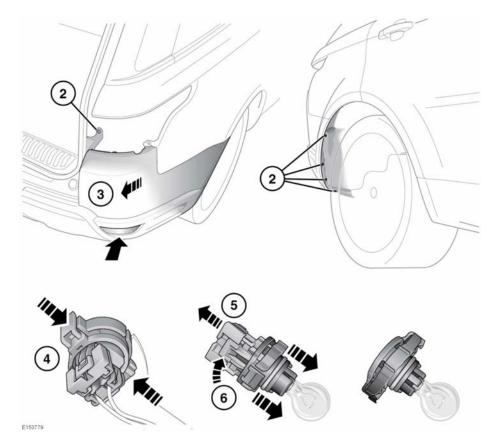

Access to a rear fog lamp housing is from above and behind the rear bumper. The bulb holder is a black plastic unit that incorporates the bulb. Set the Air suspension to the Off-road height position, for increased access to the bumper fixings. See **120**, **OFF-ROAD HEIGHT**.

- 1. Remove the rear lamp unit. See 226, REAR LAMP REMOVAL.
- 2. Remove the 5 fixings from the bumper.
- **3.** Gently and evenly pull the bumper to release the 8 securing clips from the wing panel.

① Do not use excessive force, as this may cause damage to the vehicle.

**Note:** Only limited movement is required to allow access to the rear of the fog lamp unit.

- 4. To remove the bulb holder, press in the outer wings on the black plastic unit and pull the holder free of the housing.
- To separate the bulb holder from the electrical connector, first push up the connector lock.
- **6.** Push in the release mechanism while pulling the connector and bulb holder apart.