
UNDER BONNET COVERS - REMOVAL

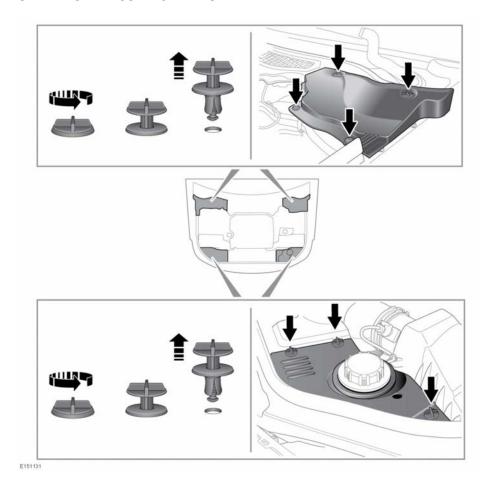

- 1. Release and remove the turnbuckle clips securing the cover.
- 2. Lift the front edge of the cover and slide forwards to remove.

UNDER BONNET COVERS - REFITTING

- Before refitting the under bonnet covers, make sure that no pipes, cables or other items, have been trapped between the cover and the casing.
- 1. Place the cover over the casing, make sure that the holes are aligned.