

 **Make sure nothing has been left under the third row seat or in the footwell, when folding down the seat, as this could cause damage to the item or the seat.**

 **Always make sure that objects carried in the vehicle are secured properly.**

 **Never allow passengers to travel in the loadspace, under any circumstances.**

The third row seats can be folded or raised individually using the buttons located behind the second row seats or the side of the loadspace.

Note: *The loadspace cover must be removed before folding or raising the third row seats. This can be stored in the loadspace.*

1. **To fold:** Press the button once to fold the head restraint fully downwards. Press the button once again and the seatback will fold.
2. **To raise:** Press to raise the seatback to the upright position.
3. Manually raise the head restraint until it latches into position.

Note: *If the electric seats are operated more than 3 times through the full fold/raise sequence in quick succession, the system will be disabled for 2 minutes.*

 **The head restraint must always be raised when using the third row seats.**

 **Make sure that when the head restraint is raised, the locking mechanism is fully engaged.**

 The head restraint must always be folded down before folding the seatback.

RESTRICTED REAR SEAT TRAVEL

 If electric seat movement stops unexpectedly during folding or raising, check for and remove any obstructions.

Once any obstructions have been removed, continue the seat movement by pressing the appropriate fold/raise button.

Note: *If no obstructions can be seen, and normal movement cannot be carried out, contact your Dealer/Authorised Repairer.*