


## AUDIO/VIDEO CONTROLS

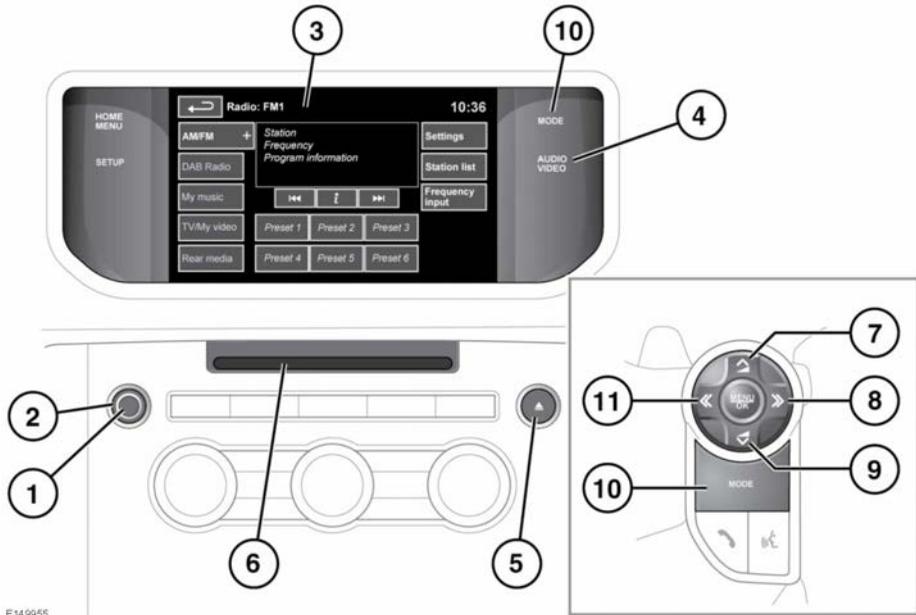

E149955

**⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

1. Press to switch the Audio system on/off.  
**Note:** *The Audio system will operate with the ignition on or off but will always switch off, when the ignition is switched off. Switch the Audio on again, if required.*
2. Rotate to adjust the volume level.  
**Note:** *If the volume is turned to zero while a Compact Disc (CD) is playing, the CD will pause play. Play will resume when a greater volume is selected.*
3. Touch screen.
4. **AUDIO VIDEO:** Press for direct access to the **Audio/Video** menu.
5. CD/Digital Versatile Disc (DVD) eject button.

### 6. CD/DVD loading slot:

The player will accommodate 1 disc at a time but up to 10 CDs can be uploaded into the CD store. Only Compact Disc Digital Audio (CDDA) discs can be uploaded into the CD store.

Only discs with CDDA tracks and no other type, can be uploaded to the Stored CD store.

Insert a disc into the loading slot until resistance is felt. The player mechanism will complete the loading.

7. Press to increase the volume for any source.
8. **Seek up:**  
Short press:
  - To select the next radio preset.